


Hand Slide Mounting Unit

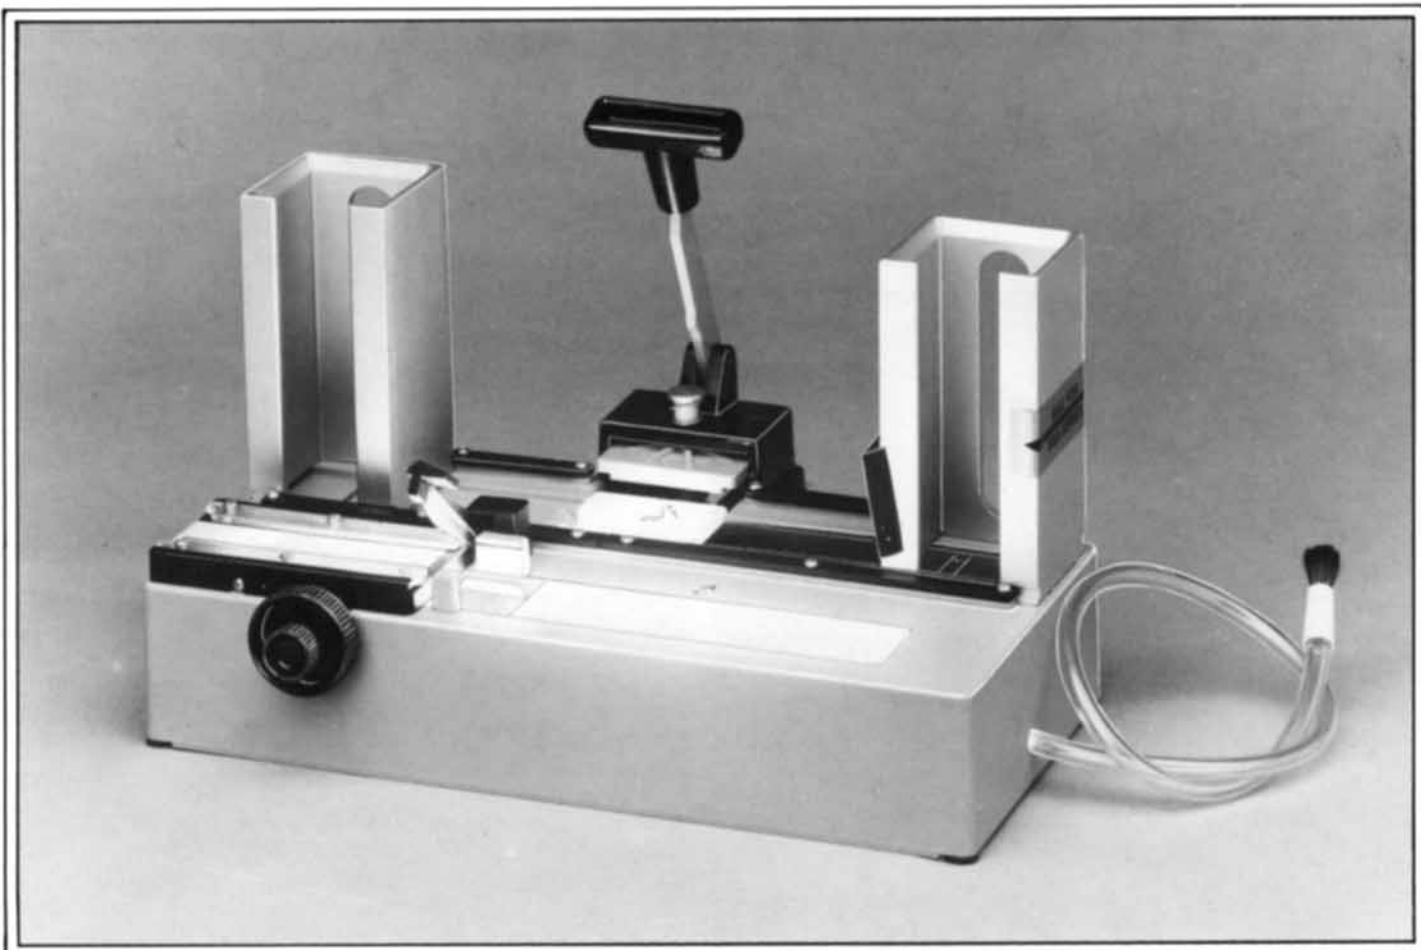

Art. No. 8209


For GePe Slide-mounts type:



3 mm glassmounts
3 mm glassless mounts with metal mask
2,5 mm GePe Pro mounts

2 mm glassmounts*
2 mm glassless mounts with metal mask*
1,9 mm LKM-mounts*

*) Spacer plate 8209-01 requested

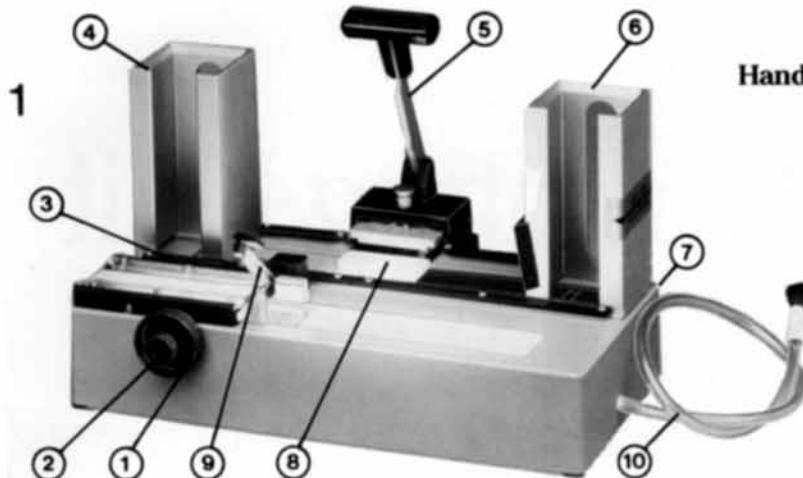

Hand Slide Mounting Unit Art. No. 8209

1. Film transport wheel
2. Adjustment locking screw
3. Switch for lighting
4. Holder for lower half mount
5. Mounting press
6. Holder for upper half mount
7. Fitting for hose of household vacuum cleaner
8. Mounting plate
9. Cutter
10. Suction hose with brush

Loading with slidemounts

Fill the two mount holders — as necessary with grey or white mount halves.

In the holder for lower half mounts (4), the metal mask must be turned upwards and in the holder for upper half

mounts (6) the metal mask must be turned downwards. (With original slide film, put the white halves in holder (4), the emulsion side of the film upwards in the film cutting device.)

Loading film

Put the film between the film guide of the cutter device. Unscrew the adjustment locking screw (2) and adjust with the film transport wheel (1) to the right positioning of the film, that the separation of the frames correspond with the index marks.

Then lock the screw (2) again.

OPERATION

Move the mount holder (4) to the right over the mounting plate (8) and return, (ill. 2). One mount half falls on the mounting plate.





Important: To insure a smooth traction of the frame holder please hold and track the holder in the lower third part.

Turn the film transport wheel (1) to advance the film, then cut the film with the cutting device.


By means of the mounting tweezers, (ill. 3) the film is held in the perforation sprockets and placed under the two lips of the metal mask, (ill. 4).

Please note that the film must be kept curved until it is placed into the metal mask. When releasing the tweezers, the film will automatically glide under the lips of the mask.

Please also note, if the film is curved strongly, turn the two mount halves in the mount holders, the way that the lips show in direction of the two holders (picture frame vertical) (ill. 5). This prevents that the film in the lower frame half is pushed out of its right position when moving the mount holder (6) to the left.

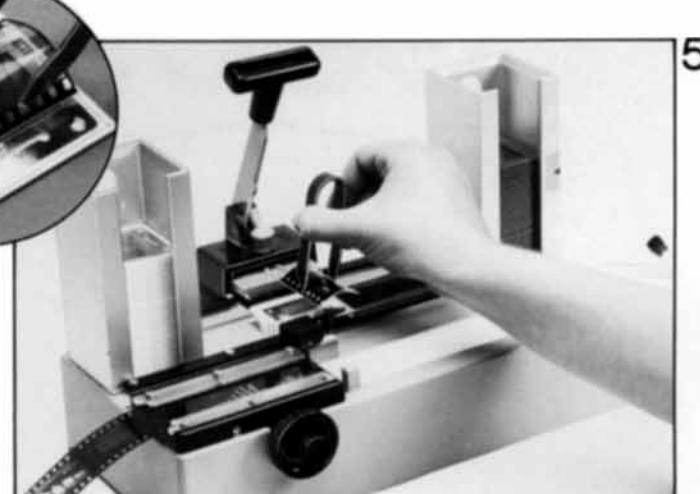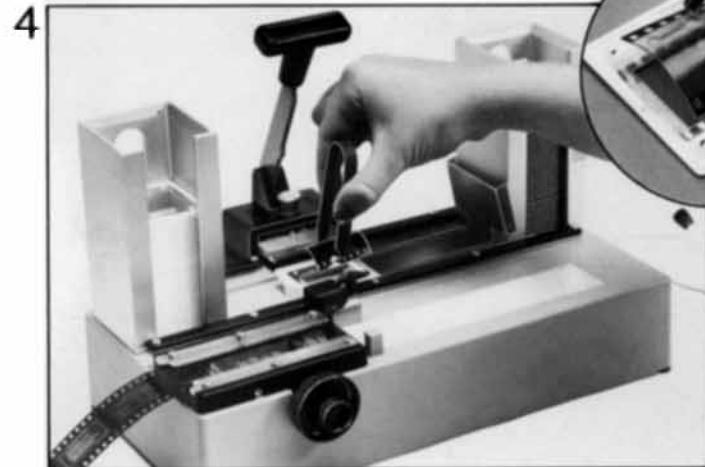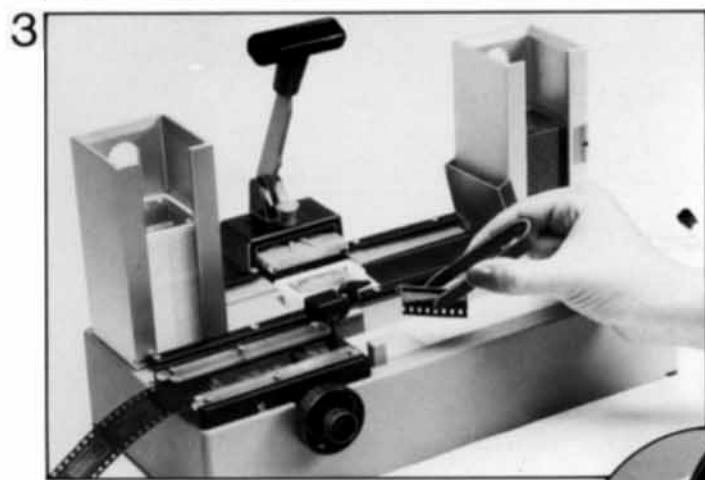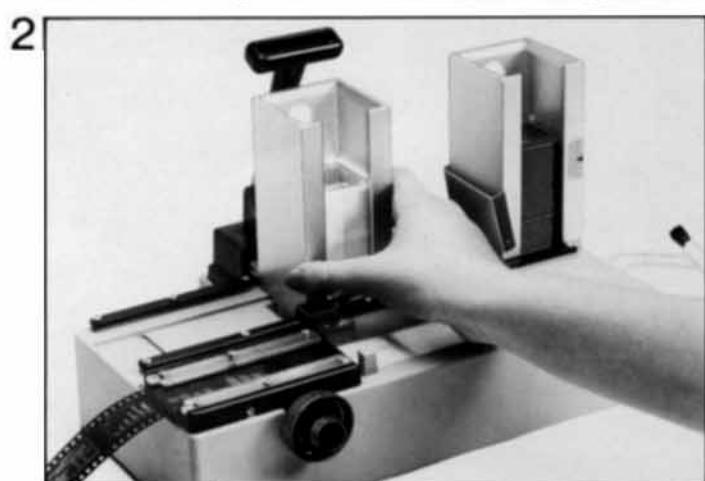

6

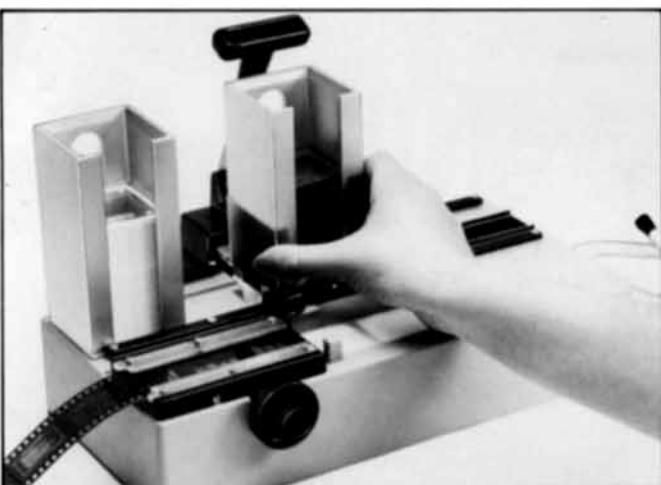


Then move mount holder (6) to the left over the mounting plate, (ill. 6), and press the mount holder lever. The upper mount half is in position. Now return the mount holder to the right but keep the lever pressed until end position.

Then only release the lever.

Please make sure that the two mount halves are exactly one over the other.


7

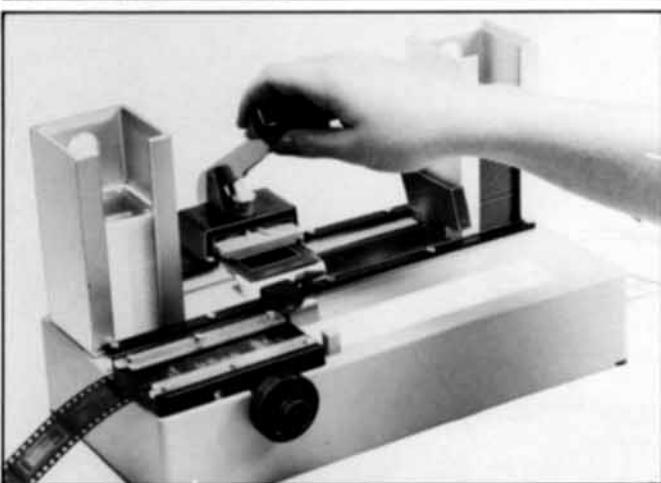

Press the two mount halves together by means of the mounting press (5), (ill. 7). The ready mounted slide may be checked over the built-in illuminated ground glass.

To allow dust free mounting, you may attach a household vacuum cleaner at the fitting (7) already provided for.

8

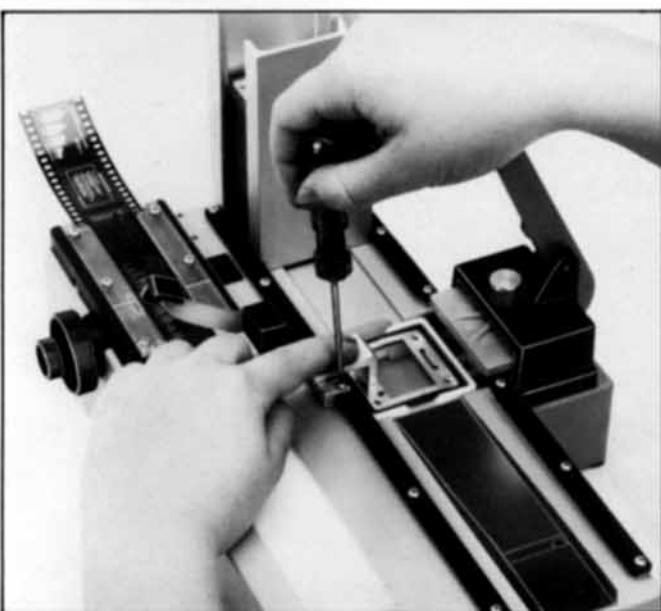

GePe PRO-Mounts

If using GePe PRO-mounts with 3 registration pins you can fix a special mounting device available as accessory Art.Nr. 8209-04, which insures that the sprocket-holes of the slide film are pushed properly into the registration pins of the slide mount.

Together with the special tweezers this device gives a further facilitation of the mounting of GePe PRO mounts.

Fixation of the mounting device

Remove the two screws in the center of the front guide. Put a GePe PRO-mount with the registration pins forward on the mounting press. Fix the device as shown on Ill. 8. Take care, that the two hollows are covering exactly the corresponding registration pins, before you tighten the screws.

Mounting of the GePe PRO mount

By means of the special tweezers for GePe Pro mount, Art.Nr. 8103 as replacement, the cutted slide film piece must be hold and lifted in the third sprocket-hole from the right side. Thereby the cutted, inclined front part of the tweezers must be placed forward with the only left tooth placed into the sprocket-hole. The backward situated film will be placed under the backward lip of the metal mask in such a way that the sprocket-holes of the forward film board fit together with the registration pins. Two sprocket-holes will be pushed on to the corresponding registration pins of the GePe PRO mount by means of the rotating lever of the device (Ill. 8), before you remove the tweezers.

9



Different thickness of slide mounts.

- a) GePe A Slide Mounts 3 mm
 - GePe Pro Slide Mounts 2,5 mm
 - GePe Glassless Mounts with metal mask 3 mm
- may be mounted *without* a special adapter on the mounting plate (8).
- b) For
 - GePe Slide Binders 2 mm (central 2,3 mm)
 - GePe Glassless Mounts with metal mask 2 mm
 - GePe Slide Binders LKM 1,9 mm
- a special adapter *must be* put on the mounting plate (8).

Please note that the arrow on the adapter shows in direction of mounting press.

Make sure when using the unit that the slots in the bottom plate are always accessible for ventilation air.

Accessories

| | |
|--|---------|
| Spacer plate for 1,9 or 2 mm mounts | 8209-01 |
| Holder for 35 mm film roll (winding off) | 8209-03 |
| Mounting device for GePe PRO mount including 2 tweezers 8103 | 8209-04 |
| Special tweezers for GePe PRO mount, 1 pce as replacement | 8103 |
| Tweezer (normal) | 8102 |

Spare parts

| | |
|-----------------------------|---------|
| Filmcutter, complete | 8209-10 |
| Knife kit, complete | 8209-11 |
| Plastic guide kit, complete | 8209-12 |
| Opal glass kit, complete | 8209-13 |
| Mounting press, complete | 8209-14 |
| Suction hose with brush | 8209-15 |
| Reflector | 8209-16 |
| Electric cover plate | 8209-17 |
| Ballast 220-240 V | 8209-18 |
| Ballast 110 V | 8209-19 |
| Lamp for 220-240 V | 8209-20 |
| Lamp for 110 V | 8209-21 |
| Socket for lamp 220-240 V | 8209-22 |
| Socket for lamp 110 V | 8209-23 |
| Main switch 220-240 V | 8209-24 |
| Main switch 110 V | 8209-25 |
| Holder for lower half mount | 8209-26 |
| Holder for upper half mount | 8209-27 |

Power connection: 220-240 V 50 Hz (US 110 V 60 Hz)

Type of lamp: PL 11W rating 11W Philips or Osram
(US PL 13W Osram)

Rating: 25W

Measurement: L x W x H 330 x 190 x 280 mm (13" x 7,5" x 11")

Weight: 2 kg (4 1/2 lb.)

8209

ENGLISH

- Ensure that the power cord is unplugged from the electrical outlet before exchanging the lamp.
- Let the lamp cool before it is exchanged
- The power cord of this unit can not be exchanged. If the power cord is damaged the whole unit has to be taken out of use.
- Be sure that the ventilation inlets are not blocked when the unit is in use.
- Lamp: 230V, 11W 115V, 13W

DEUTSCH

- Vor einem Lampenwechsel das Gerät ausschalten
- Vor dem Lampenwechsel die Lampe abkühlen lassen.
- Das Netzkabel des Gerätes kann nicht ausgetauscht werden. Wird das Netzkabel beschädigt, muss das Gerät ausser Betrieb genommen werden.
- Die Lüftungsschlitzte dürfen während des Betriebs nicht überdeckt sein:
- Lampe: 230V, 11W 115V, 13W

FRANÇAIS

- Veiller à ce que le cordon d'alimentation soit bien déconnecté du secteur avant d'échanger la lampe.
- Laisser la lampe refroidir avant de l'échanger.
- Le cordon d'alimentation ne peut être échangé. S'il devait être endommagé. L'ensemble de l'équipement est à mettre au rebut.
- Veiller à ne pas obstruer les orifices de ventilation lors de l'utilisation.
- Lampe: 230V, 11W 115V, 13W

SVENSKA

- Bryt strömmen före lampbyte.
- Låt lampan svalna innan lampbyte.
- Sladden till detta bruksföremål kan ej bytas. Om sladden skadas skall bruksföremålet kasseras eller återsändas till fabrik för reparation.
- Vid användning får ej ventilationsöppningarna på något sätt blockeras.
- Lampa: 230V, 11W 115V, 13W

NORSK

- Slå av strømmen før lampen byttes.
- La lampen avkjøles før den byttes.
- Strømledningen til dette apparatet kan ikke byttes. Dersom ledningen skades må apparatet kasseres.
- Ved bruk, vennligst sørг for at ventilasjons åpningene ikke er tildekket.
- Lampe: 230V, 11W 115V, 13W

DANSK

- Strømmen skal afbrydes, inden lampen udskiftes.
- Lad lampen køle af inden udskiftningen.
- Netledningen må ikke aftages. Hvis netledningen beskadiges, skal apparatet indleveres til reparation gennem forhandleren.
- Ventilationsåbningerne må ikke tildækkes, mens apparatet er i brug.
- Lampe: 230V, 11W 115V, 13W

SUOMI

- Katkaise virta ennen lampun vaihtoa.
- Anna lampun jäähytyä ennen vaihtoa.
- Virtajohtoa ei voi vaihtaa. Virtajohdon vahingoittuessa on laite käyttökelvoton.
- Laitetta käytettäessä ei ilmanvaihtoaukkoja saa peittää.
- Lamppu: 230V, 11W 115V, 13W